

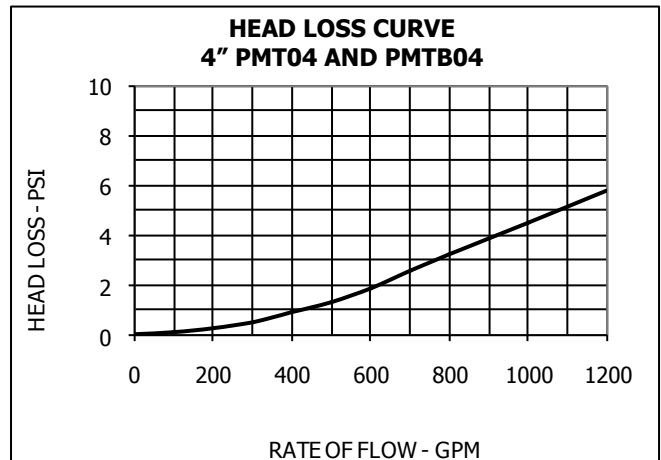
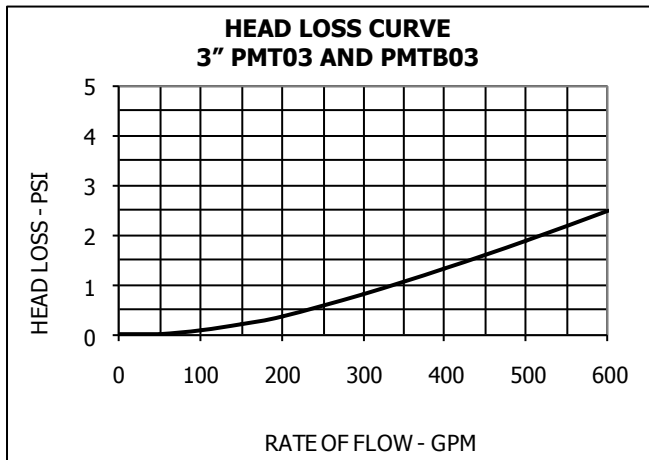


ZENNER PMT and PMTB Turbine Water Meters (Without Strainer) Typical Head Loss Curves

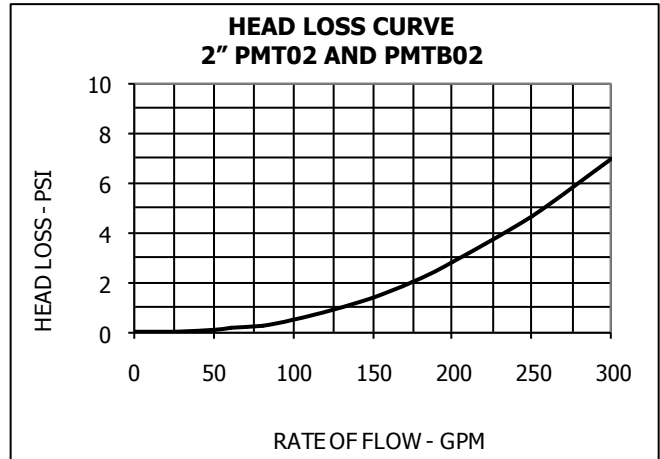

ZENNER PMT and PMTB Turbine Water Meters (Without Strainer) Typical Head Loss Curves

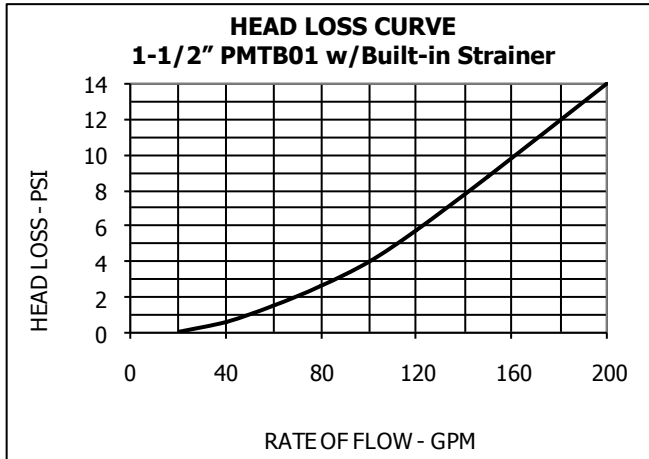